

Delete User Code (UC)

Can you delete a code that was programmed?

Yes, you can delete a user code (UC). Here are the steps:

1. Enter your 6-digit programming code (PC). The Schlage button will flash orange and beep 3 times. If you don't have it memorized, it is located on the sticker behind the lock.
2. Press the Schlage button. The Schlage button will turn blue.
3. Press the 2 button. The Schlage button will flash orange and beep 3 times.
4. Enter the 4-digit user code (UC) you want to delete. The Schlage button will flash orange and beep 3 times.
5. Re-enter the 4-digit user code (UC) you want to delete. The Schlage button will flash green and beep 1 time, indicating the code has been successfully removed.



Lights/Beeps Legend		Programming Legend	
 Three Lights and Three Beeps ¹	Step Confirmation <ul style="list-style-type: none"> A correct entry was made during programming and accepted by the lock. 	 PC	Programming Code (six numbers)
 One Long Flash and One Long Beep ¹	Function Confirmation <ul style="list-style-type: none"> A set of steps was completed successfully. 	 Schlage Button	<ul style="list-style-type: none"> Used for programming Used to turn on the backlight
 One Long Flash and Two Beeps ¹	Error <ul style="list-style-type: none"> An incorrect entry was made during programming. 	 UC	User Code (four numbers)
 Keypad Numbers	Backlight <ul style="list-style-type: none"> Entire keypad glows blue during programming and when the Schlage button is pressed before pressing any codes. 	 Keypad Numbers	<ul style="list-style-type: none"> Used for programming Used to enter a user code to unlock the lock

Add User Code (UC)

How do you add a user code (UC).

Here are the steps:

1. Enter your 6-digit programming code (PC). The Schlage button will flash orange and beep 3 times. If you don't have it memorized, it is located on the sticker behind the lock.
2. Press the Schlage button. The Schlage button will turn blue.
3. Press the 1 button. The Schlage button will flash orange and beep 3 times.
4. Enter the 4-digit user code (UC) you want to add. The Schlage button will flash orange and beep 3 times.
5. Re-enter the 4-digit user code (UC) you want to add. The Schlage button will flash green and beep 1 time, indicating the code has been successfully removed.



Lights/Beeps Legend		Programming Legend	
<p>Three Lights and Three Beeps¹</p>	<p>Step Confirmation</p> <ul style="list-style-type: none"> A correct entry was made during programming and accepted by the lock. 		<p>Programming Code (six numbers)</p>
<p>One Long Flash and One Long Beep¹</p>	<p>Function Confirmation</p> <ul style="list-style-type: none"> A set of steps was completed successfully. 		<p>Schlage Button</p> <ul style="list-style-type: none"> Used for programming Used to turn on the backlight
<p>One Long Flash and Two Beeps¹</p>	<p>Error</p> <ul style="list-style-type: none"> An incorrect entry was made during programming. 		<p>User Code (four numbers)</p>
	<p>Backlight</p> <ul style="list-style-type: none"> Entire keypad glows blue during programming and when the Schlage button is pressed before pressing any codes. 		<p>Keypad Numbers</p> <ul style="list-style-type: none"> Used for programming Used to enter a user code to unlock the lock